

ELECTRONIC RETURN DAMPER ACTUATOR

5 Nm | MODBUS RTU CONTROL



The appearance of the product may differ from the illustration. Technical specifications are subject to change.

MECA...05 (S1) SERIES

MECA series actuators with Electronic Return® (ER) function are designed and produced for extended functionalities in HVAC systems fan coil and laboratory applications.

Electronic Return® (ER) is able to manage short voltage interruptions for max. 4 seconds. In case of longer voltage interruption actuator will move the damper or valve to a predefined emergency position (EPS).

- Torque 5 Nm.
- For damper size ca. 1.0 m².
- Power supply 24 V_{AC/DC}
- MODBUS RTU control.
- Manual over-ride push button.
- Shaft dimension: Ø 10...17 mm / square 5...12 mm.
- Minimum shaft length 40 mm.
- Selectable direction of rotation by switch.
- Adjustable angle of rotation.
- Actuator available with 1 m connection cable.
- Optional 1 adjustable SPDT auxiliary switch.
- Customised versions and functions (on request).


MODEL SELECTION TABLE

Torque	Running time	Return time – safety function	Power supply	Auxiliary switches	Model/type
5 Nm	50...55 s	35 s	24 V _{AC/DC} ± 10%	No	MECA 1-05
5 Nm	50...55 s	35 s	24 V _{AC/DC} ± 10%	1 x SPDT (adjustable)	MECA 1-05S1

ELECTRONIC RETURN DAMPER ACTUATOR


5 Nm | MODBUS RTU CONTROL

ACTUATOR DIMENSIONS [mm]

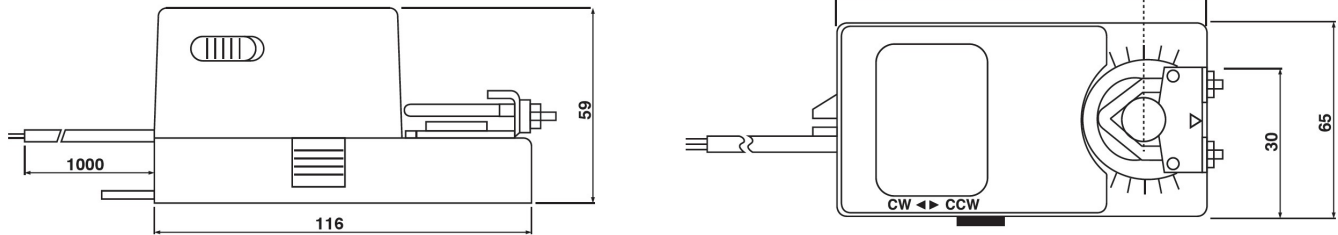

TECHNICAL SPECIFICATION


MECA 1-05 (S1)

Torque	5 Nm
Damper size	1.0 m ²
Shaft dimensions	Ø 10...17 mm / square □ 5...12 mm
Power supply	24 V _{AC/DC} ± 10%
Frequency	50...60 Hz
Communication	MODBUS RTU
Baud rate ; STOP bits; parity ; address	2400/4800/9600/19200/38400/57600/115200 ; 1 / 2 ; EVEN/ODD/NONE ; 1-247 – default (9600 ; 1 ; NONE ; 19)
Control signal (input) – optional	0(2)...10 V _{DC} / 0(4)...20 mA
Position signal (output) – optional	0...10 V _{DC}
Power consumption	
– Operating	8.7 W
– At end position	1.2 W
Rated power	14.0 VA
Auxiliary switch rating	3(1.5) A / 250 V _{AC}
Protection class	III 
Electrical wiring	1 m Cable
Angle of rotation	90° (95° mechanical limitation)
Weight	<0.55 kg
Durability	60,000 rotations
Sound level	< 42 dB
Protection degree	IP54
Working temperature range	-20°C...50°C as per IEC 721-3-3
Storage temperature	-30°C...+60°C / IEC 721-3-2
Humidity	5...95% rH (non condensing) / EN
Maintenance	Maintenance free
Principle of operation	Type 1 (acc. to EN 60730-1)
Electromagnetic compatibility	CE & ISO 9000 to EN / EEC

ELECTRONIC RETURN DAMPER ACTUATOR


5 Nm | MODBUS RTU CONTROL

Wiring diagram MECA...05 (S1)
Power supply 24 V_{AC/DC}

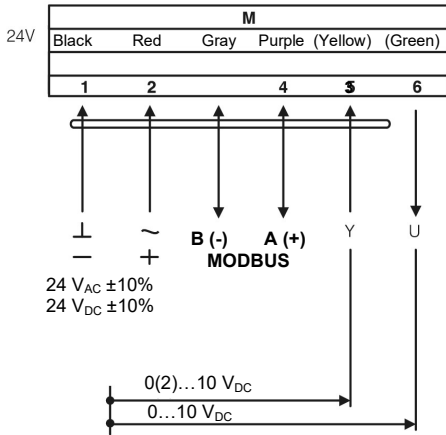


■ Changing direction of rotation MECA ...05 (S1)


Direction of rotation can be changed by toggling the CW/CCW switch on the actuator housing.

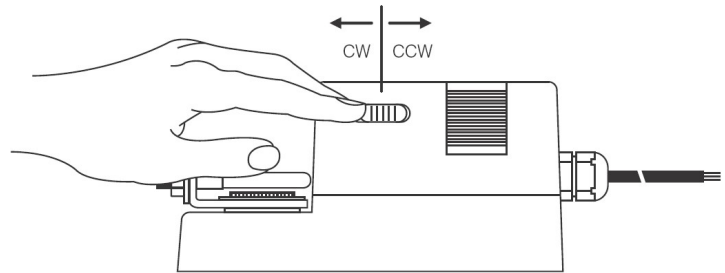

Wiring diagram MECA...05 (S1)
Auxiliary switch

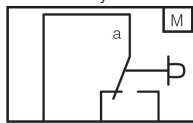


Yellow Green Blue
S1 S2 S3



3 (1.5) A / 250 V_{AC}
Actuator at 0° position

■ Auxiliary switch MECA ...05 (S1)

Switch a factory-set at 5°. The auxiliary switch can be adjusted in the range 0°...90°.

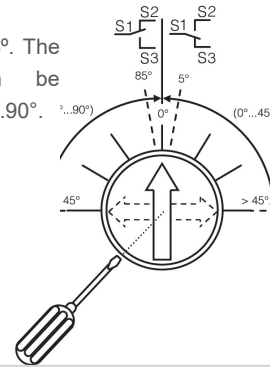


■ Version o request MECA...05 (S1)

Additional control signal (analogue)
Input resistance for additional control signal
Additional position signal
Optional fixed termination resistor for MODBUS

0...10 V_{DC} or 2...10 V_{DC}
R_i 100 kOhm or 500 kOhm
0...10 V_{DC}
120 Ohm

■ Releasing the adapter MECA...05 (S1)

Releasing the adapter is not required.

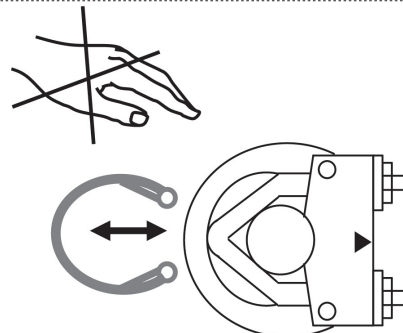

ELECTRONIC RETURN DAMPER ACTUATOR


5 Nm | MODBUS RTU CONTROL

■ LIMITING ANGLE OF ROTATION MECA...05 (S1)


Adjustment of mechanical limiter.

1. Loosen the screw of mechanical limiter.
2. Move limiter to appropriate position.
3. Tighten the screw.

*Working range of 90° can be reduced up to 30° from end position.

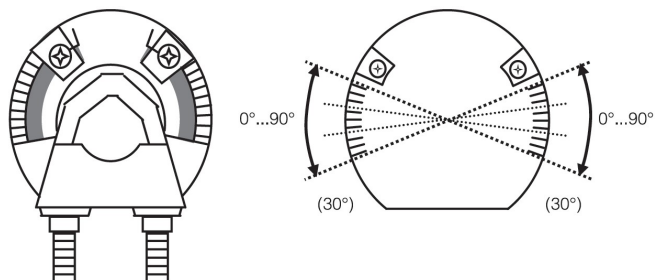

■ MODBUS

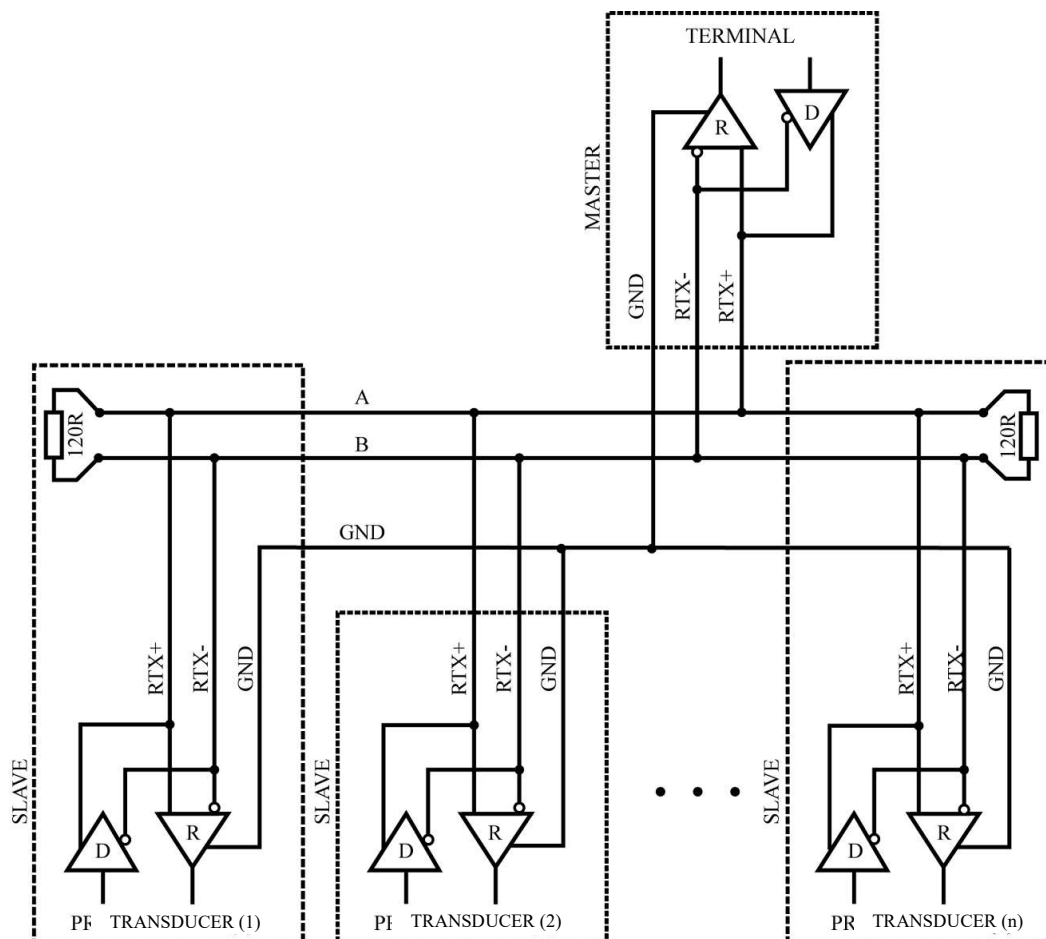

ELECTRONIC RETURN DAMPER ACTUATOR

5 Nm | MODBUS RTU CONTROL

■ MODBUS transmission parameters

The actuator has the following default (factory) settings of transmission parameters:

- **ID address: 19 decimal = 13 hex**
- **Baud rate – number of data bits – parity – number of stop bits = 19200 – 8 – None – 1**

To change the above settings, use the MODBUS CONFIGURATOR device manufactured by NENUTEC.

■ MODBUS transmission parameters

Adr	R/W	Name	Values	Default	Description	Notes
0	RW	SET_POINT	0 ÷ 100	100	Set point [%]	1)
1	RW	OVERRIDE	0 ÷ 5	0	0 – normal operation / the actuator moves to SET_POINT 1 – ignore SET_POINT and stop / lock position , 2 – ignore SET_POINT and move to 0% 3 – ignore SET_POINT and move to 100% 4 – ignore SET_POINT and move to LOW_LIM, 5 – ignore SET_POINT and move to HIGH_LIM.	2)
2	R	rsv	0x0000	0x0000	reserved	
3	R	EXT_POW	0 ÷ 2	--	0 – no external power supply 1 – external power supply present 2 – connected to the MODBUS CONFIGURATOR device	
4	R	DAMPER_POS	0 ÷ 100	0 ÷ 100	Current position (momentary) [%]	
5	R	BAT_CHARGE	0 ÷ 100	0 ÷ 100	Battery charge level [%]	
6	R	DIRECTION	0 / 1	0 / 1	0 – clockwise (CW) / 1 – counter-clockwise (CCW)	
100	R	DEV_ID	0x202C	–	Device ID (actuator with safety function)	
101	R	rsv	0x0000	0x0000	reserved	
102	R	rsv	0x0000	0x0000	reserved	
103	R	SOFT_VER	0 ÷ 0x9999	–	Firmware version (eg. 0x3210 indicates version 3.21a)	
104	R	STATUS	0 ÷ 2, 10, 20	–	0 – no error, actuator in position according to the control signal 1 – no error, actuator moves to the position according to the control signal 2 – no error, no movement, battery charging 10 – motor current exceeding limit, retry movement to the position according to the control signal 20 – motor current exceeding limit, the position according to the control signal not reached	3)
105	RW	LOW_LIM	0 ÷ 100	0		4)
106	RW	HIGH_LIM	0 ÷ 100	100		
107	RW	rsv	0x0000	0x0000	reserved	
108	RW	BUS_FAIL_POS	0÷100, 200	200	Position in case of communication loss (bus fail position)	5)
109	RW	SETPOINT_INIT	0 ÷ 100, 200	100	SET_POINT initial value (after switching on the power or reset)	1)
110	RW	WR_UNLOCK	0x0000 / 0xC5A3 / 0x6781	0x0000	0x0000 – write / change NV registers not allowed, 0xC5A3 – change NV registers allowed, 0x6781 – write NV registers.	

ELECTRONIC RETURN DAMPER ACTUATOR

5 Nm | MODBUS RTU CONTROL

NOTES:

- R – read register; W – write register; RW – read & write register
 1. SET_POINT initial value is taken from the volatile register SETPOINT_INIT.
A value in the range 0-100 means the actuator reached the set position.
The value 200 in SETPOINT_INIT register means automatic copying of VREG value (0..10 V or 2..10 V control input) to the SET_POINT register (this means control via VREG analogue input).
 2. Writing to OVERRIDE register (address 1) doesn't change the SET_POINT value (address 0).
 3. STATUS = 10 means that the actuator encounters increased mechanical resistive force and makes repeated attempts to move to the set position.
STATUS = 20 means that the actuator encounters increased mechanical resistive force and stopped movement after 5 attempts to reach the set position (failure).
Each writing in SET_POINT or OVERRIDE register resets STATUS and restarts the movement to set position.
 4. LOW_LIM and HIGH_LIM registers limit range of actuator movement to LOW_LIM (lower limit) and HIGH_LIM (upper limit) values, respectively.
In addition, the following conditions must be fulfilled: $0\% \leq \text{LOW_LIM}$ and $\text{LOW_LIM} + 30\% \leq \text{HIGH_LIM} \leq 100\%$ (minimum range of movement 30%).
 5. BUS_FAIL_POS contains actuator position in the case of MODBUS communication failure (after 120 sec. form the loss of communication).
The value BUS_FAIL_POS = 200 deactivates this function (the actuator doesn't react to loss of communication).

■ Changing device settings

All registers with address 100-109 are non-volatile (NV). If WR_UNLOCK = 0x0000, an attempt to change the value of the NV registers will have no effect.

After writing WR_UNLOCK = 0xC5A3, it is possible to change values in NV registers, but their new values are not yet taken into account.

After writing WR_UNLOCK = 0x6781, the new values of NV registers are written to non-volatile memory and taken into account for operation of the device.

IMPORTANT REMARKS

This actuator includes electrical and electronic components and may not be disposed as household waste. Please consider the local valid legislation.

24 V_{AC/DC}: Connect via safety isolating transformer.

230 V_{AC}: To isolate from the main power supply, the system must incorporate a device which disconnects the phase conductor (with at least a 3 mm contact gap.)

Consult NENUTEC representatives for specific requirements and material selections for your intended application. The entire content of this technical datasheet is protected by copyright. All rights are reserved ©.

The performance specifications are nominal and conform to acceptable industry standards. Nenuotec shall not be liable for damages resulting from misapplication or misuse of its products.



IMPORTANT REMARK

The NENUTEC MECA... actuator series can be equipped with a variety of NENUTEC products as characterized 2-way and 3-way ball valves of NVCB series.

Contact NENUTEC representatives or factory for the specific requirements and material selection for your intended application

CUSTOMISED VERSION

NENUTEC offers you actuators in customised versions, e.g. with your own brand name, with colour-coordinated applications and with your particular demand on request.

For further information please contact us or our local representative.

Nenuotec Polska

00-236 Warszawa
ul. Świętojerska 5/7
tel.: +48-(0)-504-050225
nenuotec@nenuotec.pl

MACA – STANDARD DAMPER ACTUATOR WITH ER FUNCTION

10 Nm | MODUS RTU CONTROL



The appearance of the product may differ from the illustration. Technical specifications are subject to change.

MECA...10 (S1) SERIES

MECA series actuators with Electronic Return® (ER) function are designed and produced for extended functionalities in HVAC systems fan coil and laboratory applications.

Electronic Return® (ER) is able to manage short voltage interruptions for max. 4 seconds. In case of longer voltage interruption actuator will move the damper or valve to a predefined emergency position (EPS).

- Torque: 10 Nm
- Damper size 2.0 m²
- Power supply 24V_{AC/DC}
- Shaft dimensions – Ø 10...20 mm / square □ 5...15 mm
- Minimum shaft length 45 mm
- Adjustable angle of rotation
- Direction of rotation selectable by switch
- Actuator with 1 m connection cable
- Optional 1 adjustable SPDT auxiliary switch
- Manual over ride by push button when required


MODEL SELECTION TABLE

Model/type	Torque	Power supply	Running time	Auxiliary switch
MECA 1-10	10 Nm	24 V _{AC/DC} ± 10%	70...100 s / ER 35 s	-
MECA 1-10S1	10 Nm	24 V _{AC/DC} ± 10%	70...100 s / ER 35 s	1 x SPDT (adjustable)

MACA – STANDARD DAMPER ACTUATOR WITH ER FUNCTION

10 Nm | MODBUS RTU CONTROL

ACTUATOR DIMENSIONS [mm]

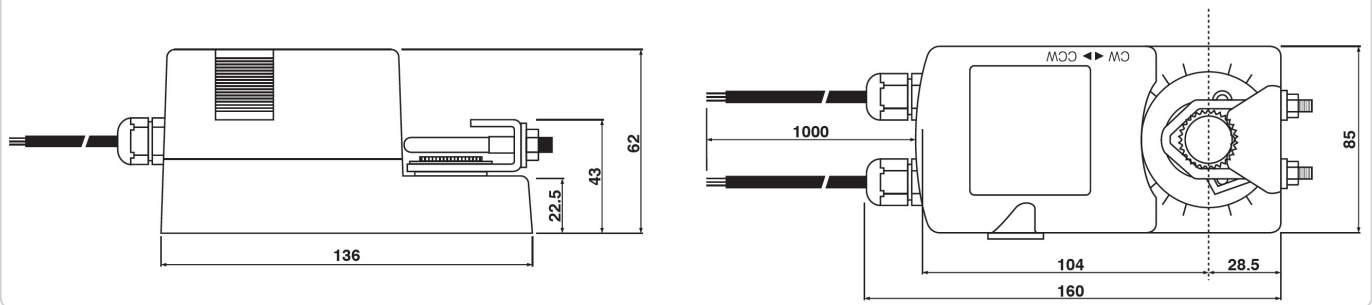

TECHNICAL SPECIFICATION


MECA 1-10 (S1)

Torque	10 Nm
Damper size	2.0 m ²
Shaft dimensions	Ø 10...20 mm / □ 5...15 mm
Power supply	24 V _{AC/DC} ± 10%
Frequency	50...60Hz
Communication	MODBUS RTU
Baud rate ; STOP bits; parity ; address	2400/4800/9600/19200/38400/57600/115200 ; 1 / 2 ; EVEN/ODD/NONE ; 1-247 – default (9600 ; 1 ; NONE ; 19)
Control signal (input) – optional	0(2)...10 V _{DC} / 0(4)...20 mA
Position signal (output) – optional	0...10 V _{DC}
Power consumption	
• In operation	6.0 W
• End position	2.0 W
Rated power	6.5 VA
Electrical connections	Cable 1 m
Auxiliary switch rating	3 (1.5) A / 250 V _{AC}
Protection class	Class III ⚡
Angle of rotation	90° (95° mechanical limitation)
Weight	<1.0 kg
Durability	60,000 rotations
Sound level	45 dB
IP protection class	IP54
Working temperature range	-20°C...50°C as per IEC 721-3-3
Storage temperature	-30°C...+60°C / IEC 721-3-2
Ambient humidity	5...95% rH (non condensing) / EN
Maintenance	Maintenance free
Principle of operation	Type 1 (acc. to EN 60730-1)
Electromagnetic compatibility	CE, UL 873 & ISO 9000 EN / EEC

MACA – STANDARD DAMPER ACTUATOR WITH ER FUNCTION


10 Nm | MODBUS RTU CONTROL

WIRING DIAGRAM MECA...10 (S1) POWER SUPPLY 24 V_{AC/DC}

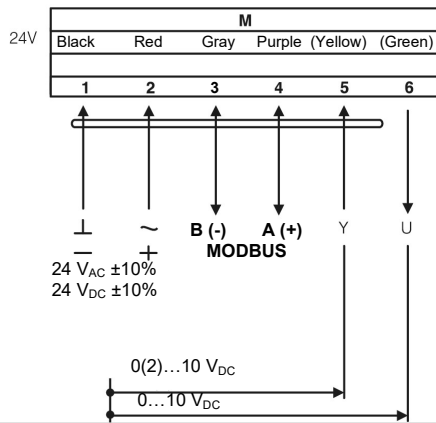


DIRECTION OF ROTATION MECA...10 (S1)

Factory setting: clockwise (CW). Direction of rotation can be changed by toggling between CW/CCW switch on the actuator housing.

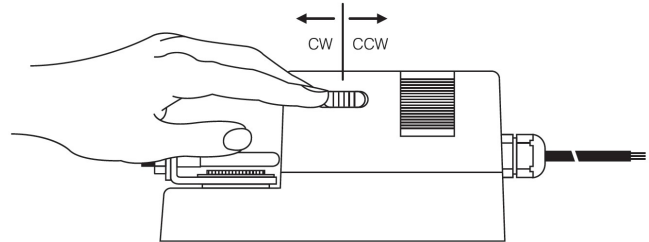


WIRING DIAGRAM MECA...10 (S1) AUXILIARY SWITCH

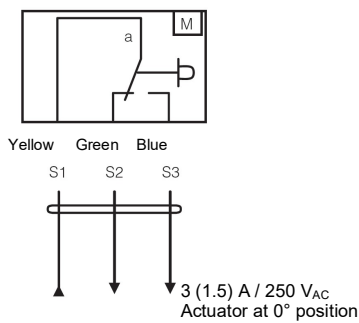

AUXILIARY SWITCH MECA...10 (S1)

Switch a factory-set at 5°. The auxiliary switch can be adjusted in the range 0°...90°.

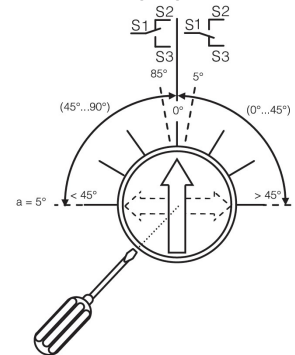

Version o request MECA...10 (S1)


Additional control signal (analogue)
 Input resistance for additional control signal
 Additional position signal
 Optional fixed termination resistor for MODBUS

0...10 V_{DC} or 2...10 V_{DC}
 Ri 100 kOhm or 500 kOhm
 0...10 V_{DC}
 120 Ohm


MACA – STANDARD DAMPER ACTUATOR WITH ER FUNCTION

10 Nm | MODUS RTU CONTROL

LIMITING ANGLE OF ROTATION MECA...10 (S1)

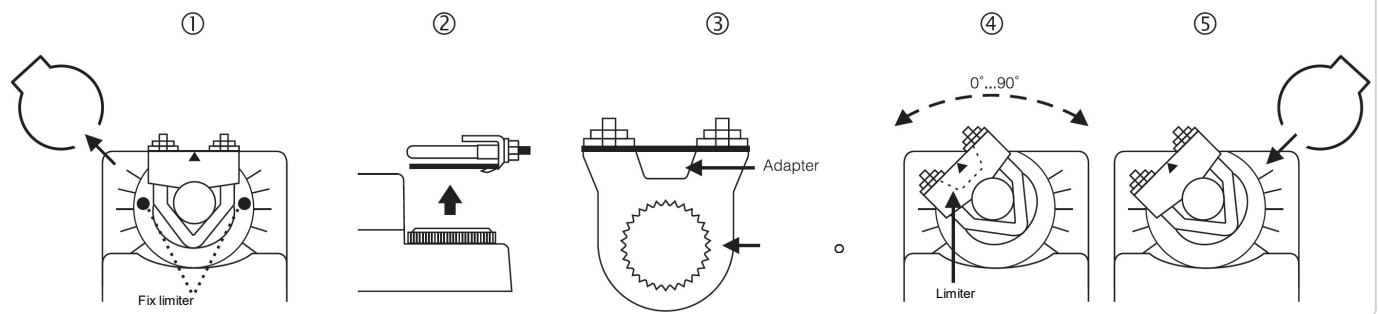

MODBUS

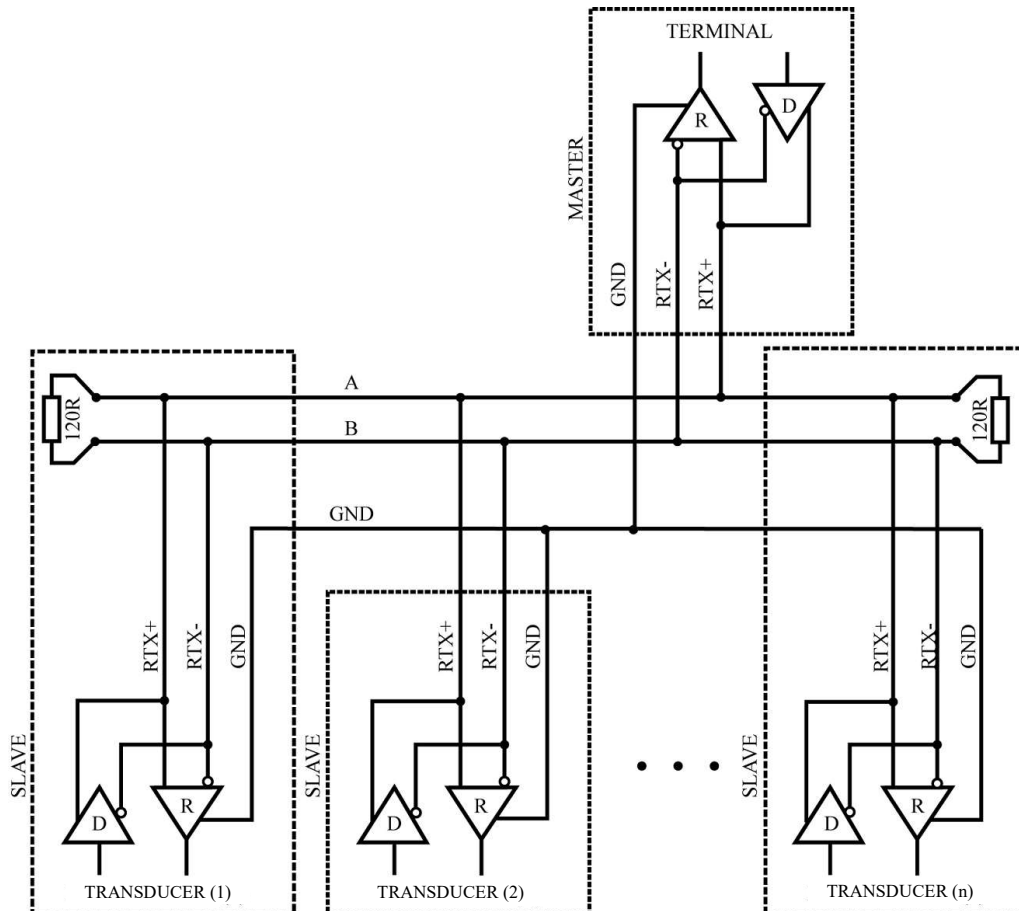

MACA – STANDARD DAMPER ACTUATOR WITH ER FUNCTION

10 Nm | MODBUS RTU CONTROL

■ MODBUS transmission parameters

The actuator has the following default (factory) settings of transmission parameters:

- **ID address: 19 decimal = 13 hex**
- **Baud rate – number of data bits – parity – number of stop bits = 19200 – 8 – None – 1**

To change the above settings, use the MODBUS CONFIGURATOR device manufactured by NENUTEC.

■ MODBUS transmission parameters

Adr	R/W	Name	Values	Default	Description	Notes
0	RW	SET_POINT	0 ÷ 100	100	Set point [%]	1)
1	RW	OVERRIDE	0 ÷ 5	0	0 – normal operation / the actuator moves to SET_POINT 1 – ignore SET_POINT and stop / lock position , 2 – ignore SET_POINT and move to 0% 3 – ignore SET_POINT and move to 100% 4 – ignore SET_POINT and move to LOW_LIM, 5 – ignore SET_POINT and move to HIGH_LIM.	2)
2	R	rsv	0x0000	0x0000	reserved	
3	R	EXT_POW	0 ÷ 2	--	0 – no external power supply 1 – external power supply present 2 – connected to the MODBUS CONFIGURATOR device	
4	R	DAMPER_POS	0 ÷ 100	0 ÷ 100	Current position (momentary) [%]	
5	R	BAT_CHARGE	0 ÷ 100	0 ÷ 100	Battery charge level [%]	
6	R	DIRECTION	0 / 1	0 / 1	0 – clockwise (CW) / 1 – counter-clockwise (CCW)	
100	R	DEV_ID	0x202C	–	Device ID (actuator with safety function)	
101	R	rsv	0x0000	0x0000	reserved	
102	R	rsv	0x0000	0x0000	reserved	
103	R	SOFT_VER	0 ÷ 0x9999	–	Firmware version (eg. 0x3210 indicates version 3.21a)	
104	R	STATUS	0 ÷ 2, 10, 20	–	0 – no error, actuator in position according to the control signal 1 – no error, actuator moves to the position according to the control signal 2 – no error, no movement, battery charging 10 – motor current exceeding limit, retry movement to the position according to the control signal 20 – motor current exceeding limit, the position according to the control signal not reached	3)
105	RW	LOW_LIM	0 ÷ 100	0		4)
106	RW	HIGH_LIM	0 ÷ 100	100		
107	RW	rsv	0x0000	0x0000	reserved	
108	RW	BUS_FAIL_POS	0÷100, 200	200	Position in case of communication loss (bus fail position)	5)
109	RW	SETPOINT_INIT	0 ÷ 100, 200	100	SET_POINT initial value (after switching on the power or reset)	1)
110	RW	WR_UNLOCK	0x0000 / 0xC5A3 / 0x6781	0x0000	0x0000 – write / change NV registers not allowed, 0xC5A3 – change NV registers allowed, 0x6781 – write NV registers.	

MACA – STANDARD DAMPER ACTUATOR WITH ER FUNCTION

10 Nm | MODBUS RTU CONTROL

NOTES:

- R – read register; W – write register; RW – read & write register
- 1. SET_POINT initial value is taken from the volatile register SETPOINT_INIT.
A value in the range 0-100 means the actuator reached the set position.
The value 200 in SETPOINT_INIT register means automatic copying of VREG value (0..10 V or 2..10 V control input) to the SET_POINT register (this means control via VREG analogue input).
- 2. Writing to OVERRIDE register (address 1) doesn't change the SET_POINT value (address 0).
- 3. STATUS = 10 means that the actuator encounters increased mechanical resistive force and makes repeated attempts to move to the set position.
STATUS = 20 means that the actuator encounters increased mechanical resistive force and stopped movement after 5 attempts to reach the set position (failure).
Each writing in SET_POINT or OVERRIDE register resets STATUS and restarts the movement to set position.
- 4. LOW_LIM and HIGH_LIM registers limit range of actuator movement to LOW_LIM (lower limit) and HIGH_LIM (upper limit) values, respectively.
In addition, the following conditions must be fulfilled: $0\% \leq \text{LOW_LIM}$ and $\text{LOW_LIM} + 30\% \leq \text{HIGH_LIM} \leq 100\%$ (minimum range of movement 30%).
- 5. BUS_FAIL_POS contains actuator position in the case of MODBUS communication failure (after 120 sec. form the loss of communication).
The value BUS_FAIL_POS = 200 deactivates this function (the actuator doesn't react to loss of communication).

■ Changing device settings

All registers with address 100-109 are non-volatile (NV). If WR_UNLOCK = 0x0000, an attempt to change the value of the NV registers will have no effect.

After writing WR_UNLOCK = 0xC5A3, it is possible to change values in NV registers, but their new values are not yet taken into account.

After writing WR_UNLOCK = 0x6781, the new values of NV registers are written to non-volatile memory and taken into account for operation of the device.

IMPORTANT REMARKS

This actuator includes electrical and electronic components and may not be disposed as household waste. Please consider the local valid legislation.



24 V_{ADC}: Connect via safety isolating transformer.

230 V_{AC}: To isolate from the main power supply, the system must incorporate a device which disconnects the phase conductor (with at least a 3mm contact gap.)

Consult NENUTEC representatives for specific requirements and material selections for your intended application.

The entire content of this technical datasheet is protected by copyright. All rights are reserved ©.

The performance specifications are nominal and conform to acceptable industry standards. NenuTec shall not be liable for damages resulting from misapplication or misuse of its products.

CUSTOMISED VERSION

NENUTEC offers you actuators in customised versions, e.g. with your own brand name, with colour-coordinated applications and with your particular demand on request.

For further information please contact us or our local representative.

NenuTec Polska

00-236 Warszawa
ul. Świętojerska 5/7
tel.: +48-(0)-504-050225
nenuTec@nenuTec.pl

ELECTRONIC RETURN DAMPER ACTUATOR

20 Nm | MODBUS RTU CONTROL



The appearance of the product may differ from the illustration. Technical specifications are subject to change.

MECA...20 (S) SERIES

MECA series actuators with Electronic Return® (ER) function are designed and produced for extended functionalities in HVAC systems fan coil and laboratory applications.

Electronic Return® (ER) is able to manage short voltage interruptions for max. 4 seconds. In case of longer voltage interruption actuator will move the damper or valve to a predefined emergency position (EPS).


- Torque 20 Nm.
- For damper size ca. 4,0 m².
- Power supply 24 V_{AC/DC}
- MODBUS RTU control.
- Manual over-ride push button.
- Shaft dimension: Ø 12...20 mm / square 11...14 mm.
- Minimum shaft length 50 mm.
- Selectable direction of rotation by switch.
- Adjustable angle of rotation.
- Actuator available with 1 m connection cable.
- Optional 2 adjustable SPDT auxiliary switches.
- Customised versions and functions (on request).

MODEL SELECTION TABLE

Torque	Running time	Return time – safety function	Power supply	Auxiliary switches	Model/type
20 Nm	90...125 s	70 s	24 V _{AC/DC} ± 10%	No	MECA 1-20
20 Nm	90...125 s	70 s	24 V _{AC/DC} ± 10%	2 x SPDT (adjustable)	MECA 1-20S

ELECTRONIC RETURN DAMPER ACTUATOR

20 Nm | MODBUS RTU CONTROL

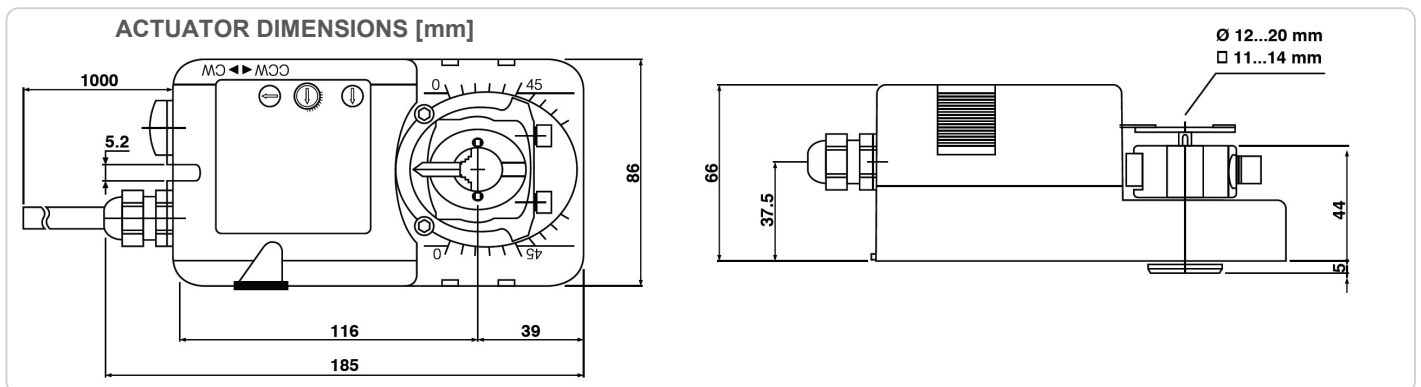


TECHNICAL SPECIFICATION

MECA 1-20 (S)

Torque	20 Nm
Damper size	4.0 m ²
Shaft dimensions	Ø 12...20 mm / square 11...14 mm
Power supply	24 V _{AC/DC} ± 10%
Frequency	50...60 Hz
Communication	MODBUS RTU
Baud rate ; STOP bits; parity ; address	2400/4800/9600/19200/38400/57600/115200 ; 1 / 2 ; EVEN/ODD/NONE ; 1-247 – default (9600 ; 1 ; NONE ; 19)
Control signal (input) – optional	0(2)...10 V _{DC} / 0(4)...20 mA
Position signal (output) – optional	0...10 V _{DC}
Power consumption	
– Operating	7.2 W
– At end position	1.2 W
Rated power	10.0 VA
Auxiliary switches rating	3(1.5) A/250 VAC
Protection class	III 
Electrical wiring	1 m Cable
Angle of rotation	90° (95° mechanical limitation)
Weight	1.2 kg
Durability	60,000 rotations
Sound level	< 45 dB
Protection degree	IP54
Working temperature range	-20°C...50°C as per IEC 721-3-3
Storage temperature	-30°C...+60°C / IEC 721-3-2
Humidity	5...95% rH (non condensing) / EN
Maintenance	Maintenance free
Principle of operation	Type 1 (acc. to EN 60730-1)
Electromagnetic compatibility	CE & ISO 9000 to EN / EEC



ELECTRONIC RETURN DAMPER ACTUATOR

20 Nm | MODBUS RTU CONTROL

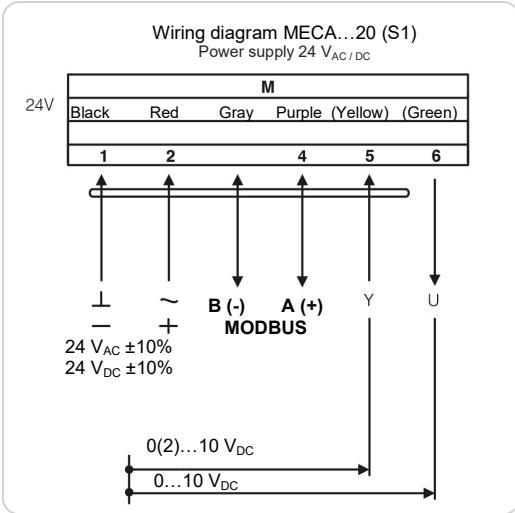


■ Changing direction of rotation MECA ...20 (S)

Direction of rotation can be changed by toggling the CW/CCW switch on the actuator housing.

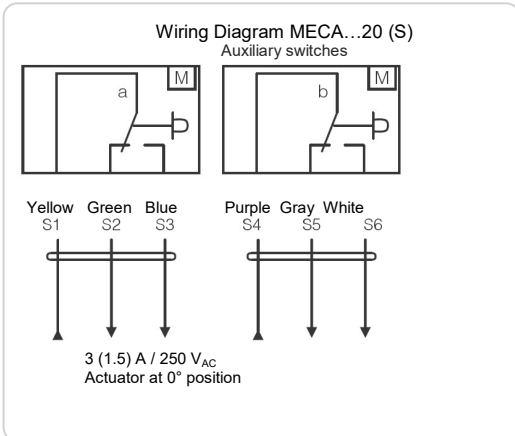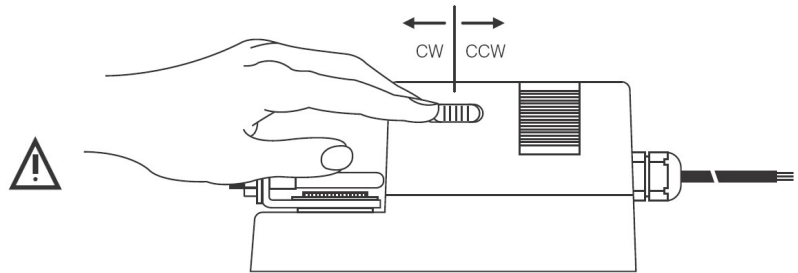

■ Auxiliary switches MECA ...20 (S)

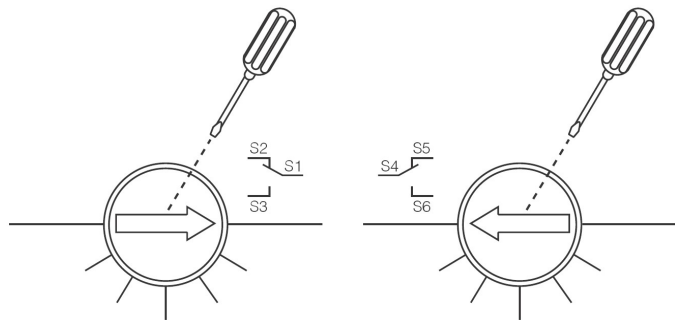


■ Version o request MECA...20 (S1)

Additional control signal (analogue)
Input resistance for additional control signal
Additional position signal
Optional fixed termination resistor for MODBUS

0...10 V_{DC} or 2...10 V_{DC}
R_i 100 kOhm or 500 kOhm
0...10 V_{DC}
120 Ohm


■ Limiting angle rotation MECA ...20 (S)

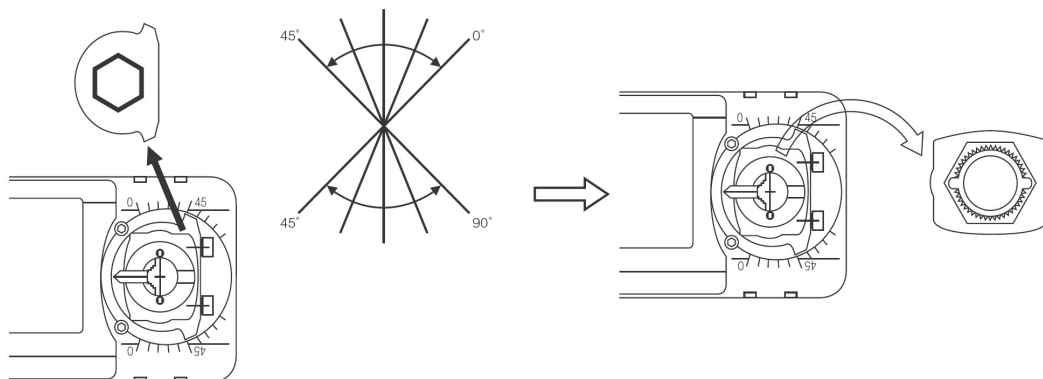


ELECTRONIC RETURN DAMPER ACTUATOR

20 Nm | MODBUS RTU CONTROL

Installation instruction

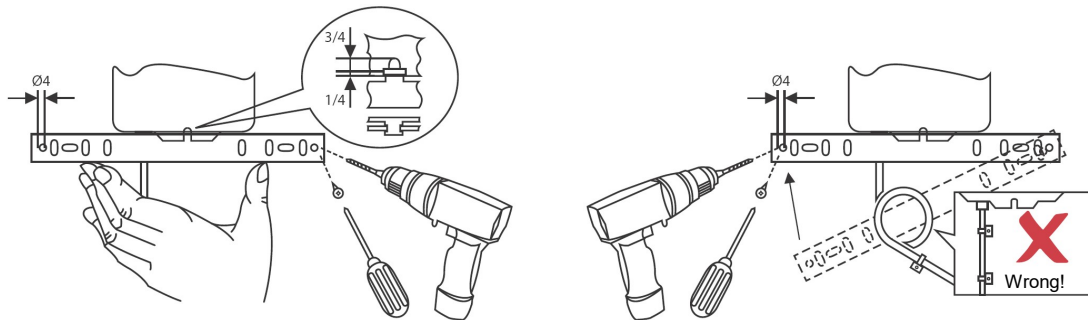

MODBUS

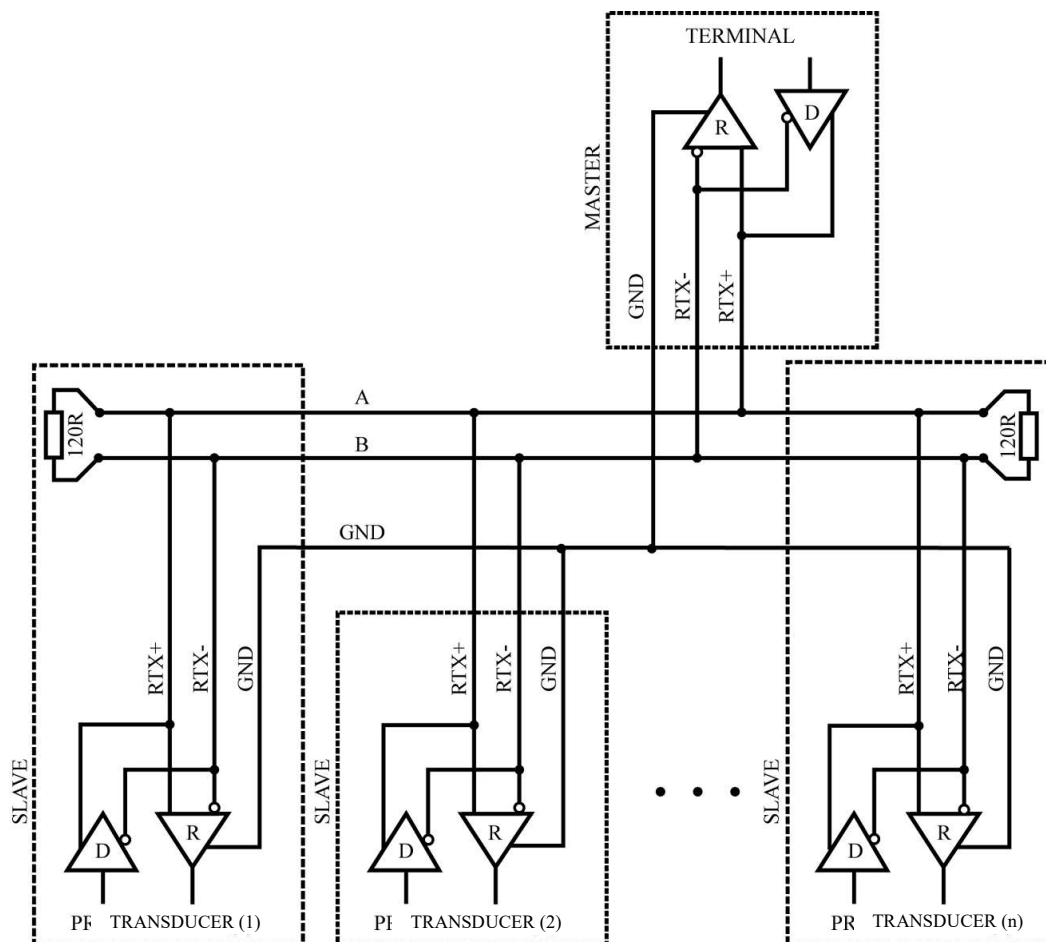

ELECTRONIC RETURN DAMPER ACTUATOR

20 Nm | MODBUS RTU CONTROL

■ MODBUS transmission parameters

The actuator has the following default (factory) settings of transmission parameters:

- **ID address: 19 decimal = 13 hex**
- **Baud rate – number of data bits – parity – number of stop bits = 19200 – 8 – None – 1**

To change the above settings, use the MODBUS CONFIGURATOR device manufactured by NENUTEC.

■ MODBUS transmission parameters

Adr	R/W	Name	Values	Default	Description	Notes
0	RW	SET_POINT	0 ÷ 100	100	Set point [%]	1)
1	RW	OVERRIDE	0 ÷ 5	0	0 – normal operation / the actuator moves to SET_POINT 1 – ignore SET_POINT and stop / lock position , 2 – ignore SET_POINT and move to 0% 3 – ignore SET_POINT and move to 100% 4 – ignore SET_POINT and move to LOW_LIM, 5 – ignore SET_POINT and move to HIGH_LIM.	2)
2	R	rsv	0x0000	0x0000	reserved	
3	R	EXT_POW	0 ÷ 2	--	0 – no external power supply 1 – external power supply present 2 – connected to the MODBUS CONFIGURATOR device	
4	R	DAMPER_POS	0 ÷ 100	0 ÷ 100	Current position (momentary) [%]	
5	R	BAT_CHARGE	0 ÷ 100	0 ÷ 100	Battery charge level [%]	
6	R	DIRECTION	0 / 1	0 / 1	0 – clockwise (CW) / 1 – counter-clockwise (CCW)	
100	R	DEV_ID	0x202C	–	Device ID (actuator with safety function)	
101	R	rsv	0x0000	0x0000	reserved	
102	R	rsv	0x0000	0x0000	reserved	
103	R	SOFT_VER	0 ÷ 0x9999	–	Firmware version (eg. 0x3210 indicates version 3.21a)	
104	R	STATUS	0 ÷ 2, 10, 20	–	0 – no error, actuator in position according to the control signal 1 – no error, actuator moves to the position according to the control signal 2 – no error, no movement, battery charging 10 – motor current exceeding limit, retry movement to the position according to the control signal 20 – motor current exceeding limit, the position according to the control signal not reached	3)
105	RW	LOW_LIM	0 ÷ 100	0		4)
106	RW	HIGH_LIM	0 ÷ 100	100		
107	RW	rsv	0x0000	0x0000	reserved	
108	RW	BUS_FAIL_POS	0÷100, 200	200	Position in case of communication loss (bus fail position)	5)
109	RW	SETPOINT_INIT	0 ÷ 100, 200	100	SET_POINT initial value (after switching on the power or reset)	1)
110	RW	WR_UNLOCK	0x0000 / 0xC5A3 / 0x6781	0x0000	0x0000 – write / change NV registers not allowed, 0xC5A3 – change NV registers allowed, 0x6781 – write NV registers.	

ELECTRONIC RETURN DAMPER ACTUATOR

20 Nm | MODBUS RTU CONTROL

NOTES:

- R – read register; W – write register; RW – read & write register
- 1. SET_POINT initial value is taken from the volatile register SETPOINT_INIT.
A value in the range 0-100 means the actuator reached the set position.
The value 200 in SETPOINT_INIT register means automatic copying of VREG value (0..10 V or 2..10 V control input) to the SET_POINT register (this means control via VREG analogue input).
- 2. Writing to OVERRIDE register (address 1) doesn't change the SET_POINT value (address 0).
- 3. STATUS = 10 means that the actuator encounters increased mechanical resistive force and makes repeated attempts to move to the set position.
STATUS = 20 means that the actuator encounters increased mechanical resistive force and stopped movement after 5 attempts to reach the set position (failure).
Each writing in SET_POINT or OVERRIDE register resets STATUS and restarts the movement to set position.
- 4. LOW_LIM and HIGH_LIM registers limit range of actuator movement to LOW_LIM (lower limit) and HIGH_LIM (upper limit) values, respectively.
In addition, the following conditions must be fulfilled: $0\% \leq \text{LOW_LIM}$ and $\text{LOW_LIM} + 30\% \leq \text{HIGH_LIM} \leq 100\%$ (minimum range of movement 30%).
- 5. BUS_FAIL_POS contains actuator position in the case of MODBUS communication failure (after 120 sec. from the loss of communication).
The value BUS_FAIL_POS = 200 deactivates this function (the actuator doesn't react to loss of communication).

■ Changing device settings

All registers with address 100-109 are non-volatile (NV). If WR_UNLOCK = 0x0000, an attempt to change the value of the NV registers will have no effect.

After writing WR_UNLOCK = 0xC5A3, it is possible to change values in NV registers, but their new values are not yet taken into account.

After writing WR_UNLOCK = 0x6781, the new values of NV registers are written to non-volatile memory and taken into account for operation of the device.

IMPORTANT REMARKS

This actuator includes electrical and electronic components and may not be disposed as household waste. Please consider the local valid legislation.

24 V_{AC/DC}: Connect via safety isolating transformer.

230 V_{AC}: To isolate from the main power supply, the system must incorporate a device which disconnects the phase conductor (with at least a 3 mm contact gap.)

Consult NENUTEC representatives for specific requirements and material selections for your intended application. The entire content of this technical datasheet is protected by copyright. All rights are reserved ©.

The performance specifications are nominal and conform to acceptable industry standards. Nenuotec shall not be liable for damages resulting from misapplication or misuse of its products.



IMPORTANT REMARK

The NENUTEC MECA... actuator series can be equipped with a variety of NENUTEC products as characterized 2-way and 3-way ball valves of NVCB series.

Contact NENUTEC representatives or factory for the specific requirements and material selection for your intended application.

CUSTOMISED VERSION

NENUTEC offers you actuators in customised versions, e.g. with your own brand name, with colour-coordinated applications and with your particular demand on request.

For further information please contact us or our local representative.

Nenuotec Polska

00-236 Warszawa
ul. Świętojerska 5/7
tel.: +48-(0)-504-050225
nenuotec@nenuotec.pl